



2019-2020 TOYOTA CAMRY 4cyl, V6

DISCLAIMER: Please read the instructions before installation very carefully. Ensure all necessary components are available. Top Speed shall hold no liability for any violation against local vehicle regulations or laws. Parts should only be installed by experienced automotive mechanics who have the necessary skill, training and tools to do the job correctly and safely. Incorrect installation can result in personal injury, vehicle damage and/or loss of vehicle control and may potentially damage the product. Any parts modified and/or damaged will void the product from warranty. Replace any loose or worn parts before beginning. Always use appropriate safety devices to support the weight of the vehicle while servicing any components and avoid any uneven road surfaces. Install at your own risk. Detailed Installation procedures vary heavily from vehicle to vehicle. This installation sheet should only be viewed as a general installation instruction. Top Speed is not responsible for damages for any reason in reliance of site information. Apply at your own risk. Professional installation is always highly recommended. Note: All Top Speed Pro 1 products are used for racing cars, vehicles operating on non-normal road conditions and also vehicles for demonstration purposes. Top Speed Pro 1 will hold no liability for the ban of this product due to local regulations or laws. Purchasers shall bear full liability for component installation. Top Speed Pro 1 also will not hold liability for any damage or death caused directly or indirectly from this product nor any installation error, including errors due to inadvertence.

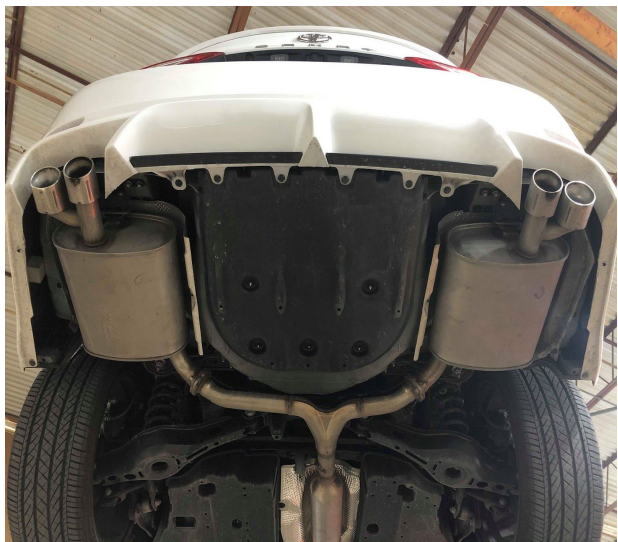

OEM EXHAUST

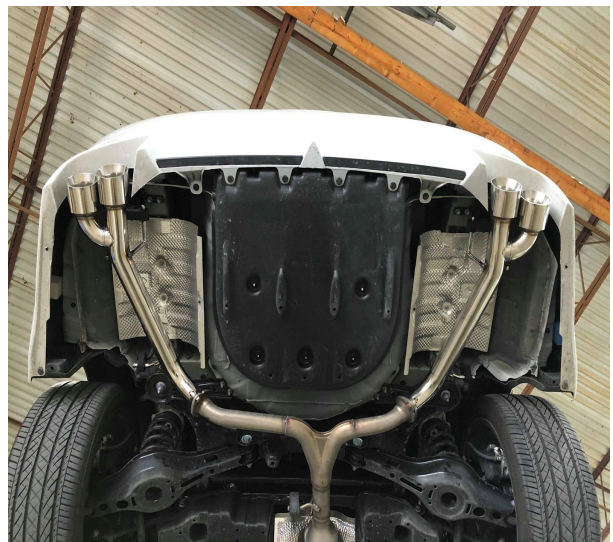

TOP SPEED PRO PERFORMANCE

STEP 1. Loosen the two bolts on the flange. If rusty spray with WD-40*



STEP 2. Remove the rear hanger, if the hanger comes off with the muffler just make sure to transfer it over to the new axle back before reinstalling.





Step 3. Remove the front two hangers, once removed carefully bring down the muffler.



2019-2020 TOYOTA CAMRY 4cyl, V6

Step 4. To begin reinstall start by installing the rear hanger first.



Step 5. Reinstall the front two hangers, once installed go ahead and align the flanges and insert the two new bolts included in your kit, make sure to leave the bolts loose until you have the axle back properly in place. A long bar like a floor jack bar can help you in getting the axle back positioned. Once you have the tips sitting in the position that you like begin to tighten the bolts and complete the install.



2019-2020 TOYOTA CAMRY 4cyl, V6



OEM MUFFLER TIPS



TOP SPEED AXLEBACK TIPS

Sound clips: <https://www.youtube.com/watch?v=YvtfD-ieuNw> 4 cyl

<https://www.youtube.com/watch?v=hfDX9mDe6OY> v6 6 cyl